

# 2-WIRE VERSION or REMOTE DC MODELS

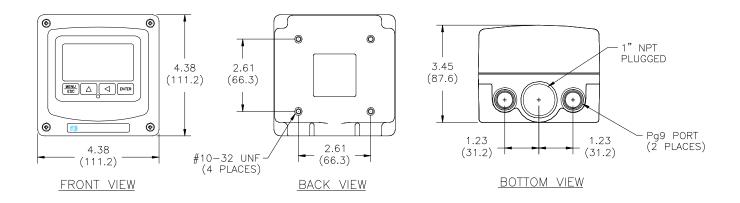

#### NOTE: JUNCTION BOXES HAVE SAME DIMENSIONS AS 2-WIRE TRANSMITTER

ATI-0655

# INTERNAL BATTERY MODEL

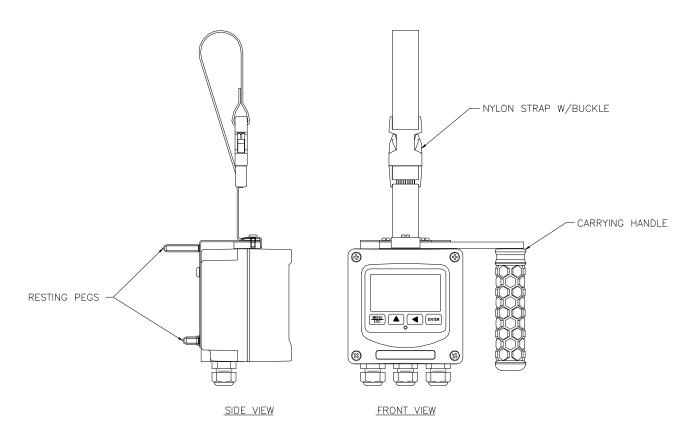



ATI-0688

SS-Q45D-60, RG (2/14) Page 1 of 8




# **WALL MOUNTING**

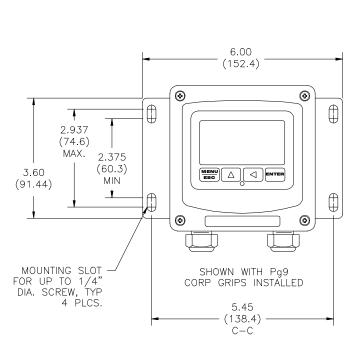

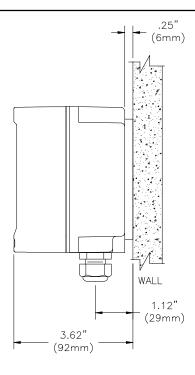

ATI-1033

# **PIPE MOUNTING**

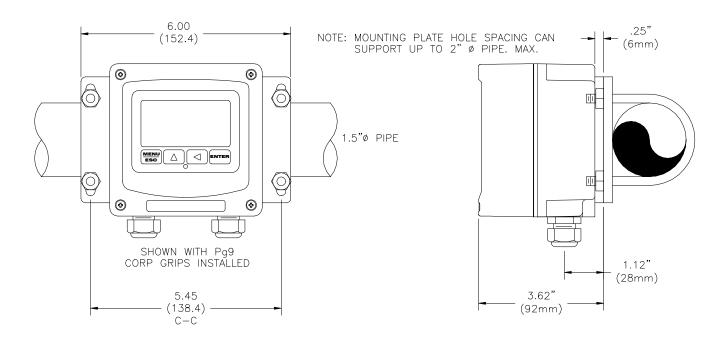


NOTE: PLATE MAY BE TURNED 90° FOR VERTICAL PIPE MOUNTING

ATI-1034

SS-Q45D-60, RG (2/14) Page 2 of 8




# INTERNAL BATTERY COFIGURATION

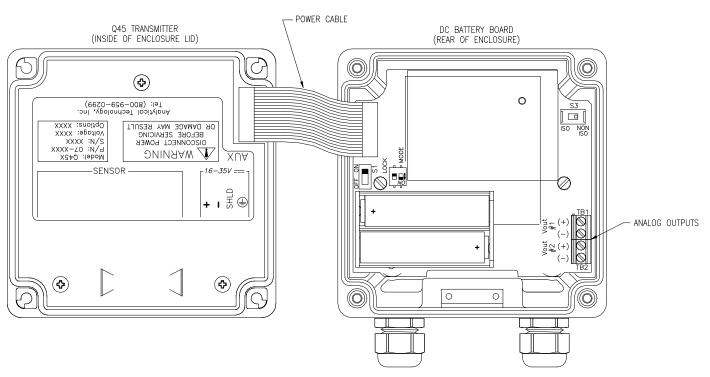

ATI-0827b


SS-Q45D-60, RG (2/14) Page 3 of 8



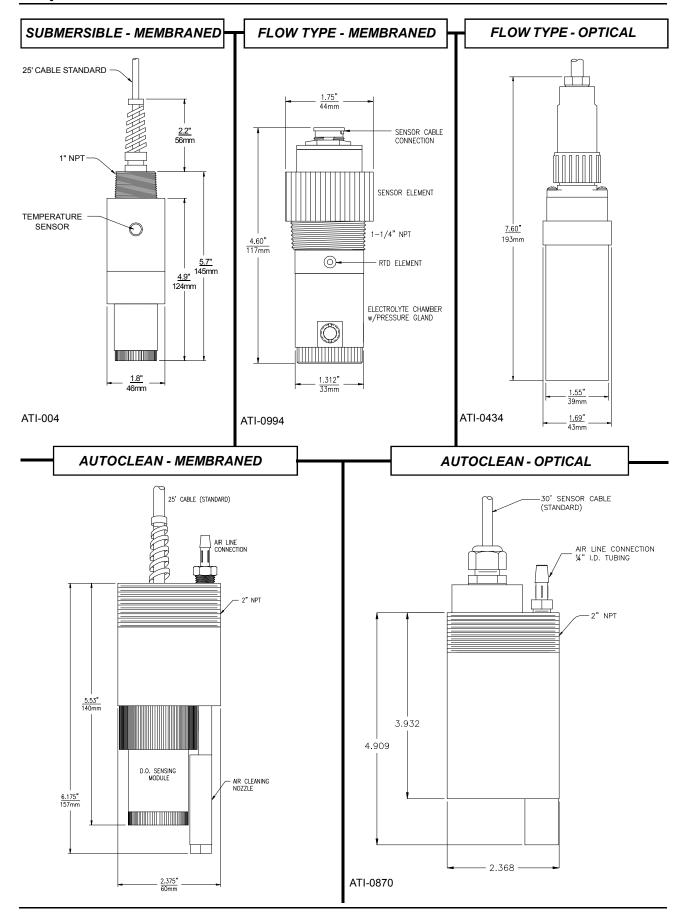


SS-Q45D-60, RG (2/14) Page 4 of 8



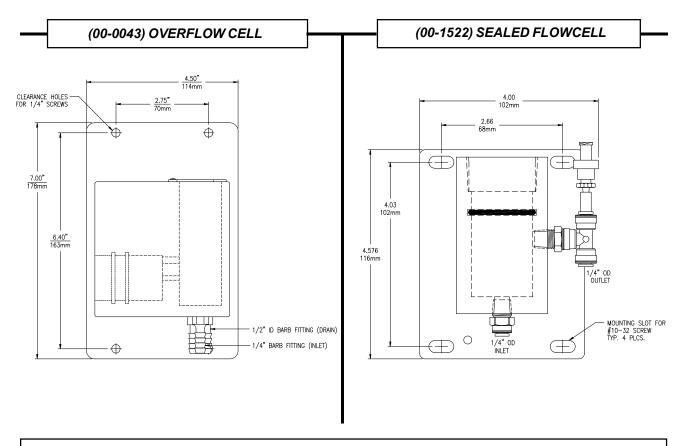


# SPECIAL APPLICATION FLOWCELLS (CONSULT FACTORY)

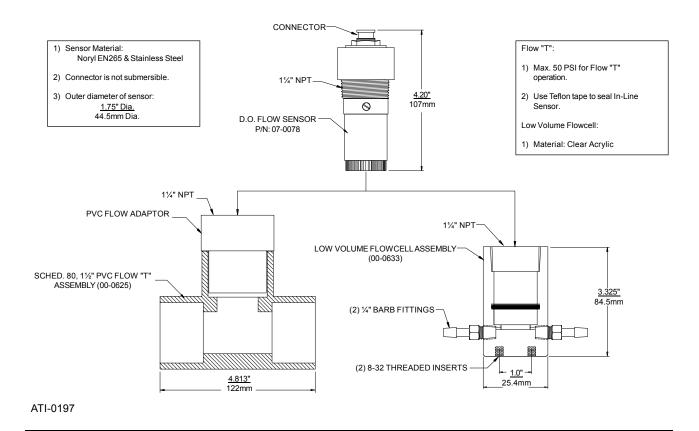

SS-Q45D-60, RG (2/14) Page 5 of 8




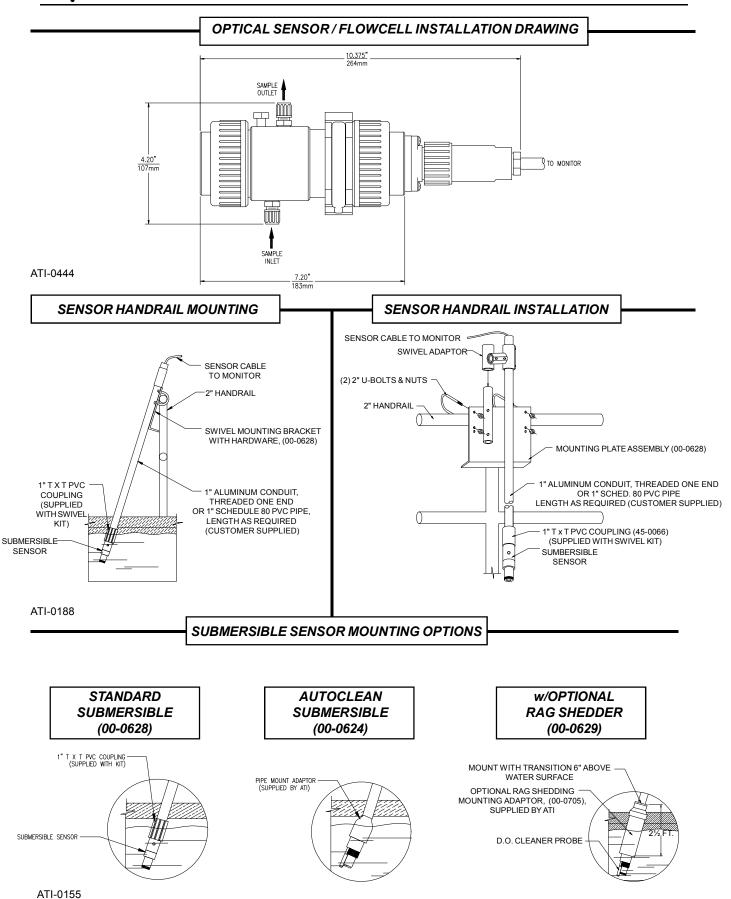

SS-Q45D-60, RG (2/14) Page 6 of 8



# **ELECTRICAL CONNECTIONS - 2-WIRE TRANSMITTER**

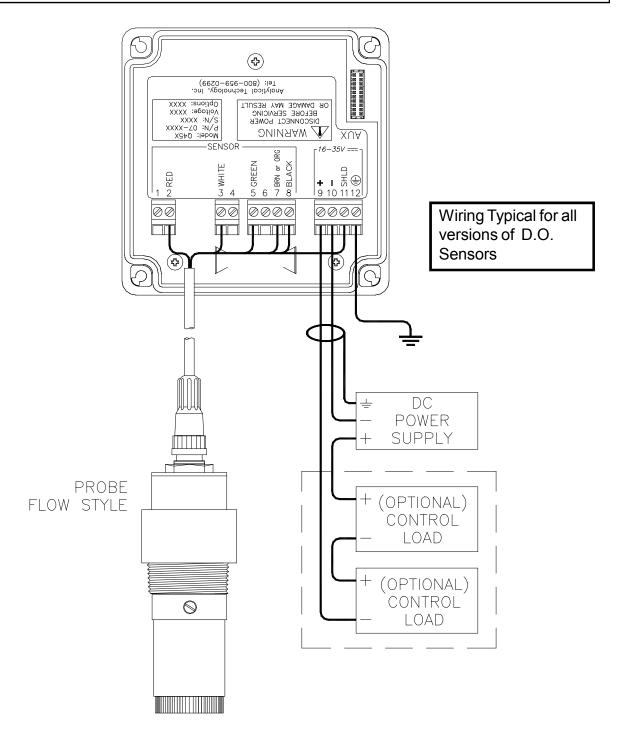

NOTES: 1. Voltage between Terminals 9 & 10 MUST be between 16 & 35 VDC.

2. Earth ground into Terminal 12 is HIGHLY recommended. This connection can greatly improve stability in electrically noisy environments.


ATI-0658

SS-Q45D-60, RG (2/14) Page 7 of 8



# **SENSOR CONNECTIONS - REMOTE JUNCTION BOX**



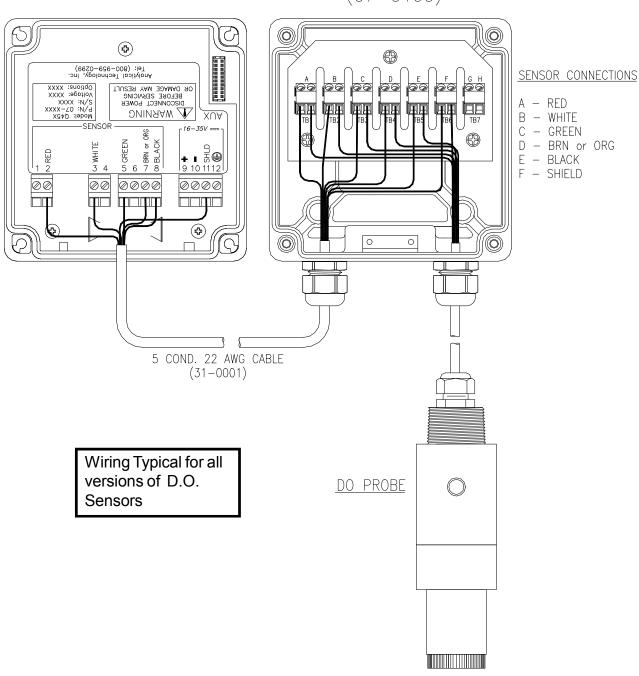

ATI-0657

SS-Q45D-60, RG (2/14) Page 8 of 8